

# T3 In-Wall Touch Screen Adapter Kit for 7" Wall-Mount Touch Screen Installation Guide

## Supported touch screen models

- C4-WALL7-xx 7" In-Wall Touch Screen
- C4-WALL10-xx 10" In-Wall Touch Screen

## Supported adapter kit models

- C4-7ZTOT3 Adapter Kit for 7" Wall-Mount Touch Screen (C4-TSWM7/Zykrnix) to T3 Touch Screen

## General description

This Control4® adapter kit provides an adapter plate to accommodate the installation of a T3 In-Wall Touch Screen. The kit is intended for an existing C4-TSWM7 (Zykrnix) touch screen to be replaced by a T3 In-Wall Touch Screen.

## Optional

- Tools to modify the wall box, such as a tape measure, a pencil, a Phillips screwdriver, a small saw to cut heavy plastic, a utility knife, or a handheld rotary cutting tool.

## What's in the kit

- Back adapter plate
- Front adapter plate
- Two screws for power box installation
- *T3 In-Wall Touch Screen Adapter Kit for 7" Wall-Mount Touch Screen Installation Guide* (this document)


## Before starting

- ✓ **Important:** Instead of using an adapter kit, we recommend that, wherever possible, you entirely remove the old touch screen's wall box, repair the wall, then install the T3 In-Wall Touch Screen's wall box as designed.
- ✓ **Important:** The front adapter plate will be easily visible with the 7" screen. For the most even finish, we recommend painting the adapter plate to match the wall *before* attaching it to the wall box.

## Removing the original touch screen

### To remove the original touch screen:


- 1 Press up on the top center of the bezel until it unclips from the touch screen.
- 2 Press outward on the two sides of the bezel until they unclip from the touch screen, then unclip the bottom of the bezel.

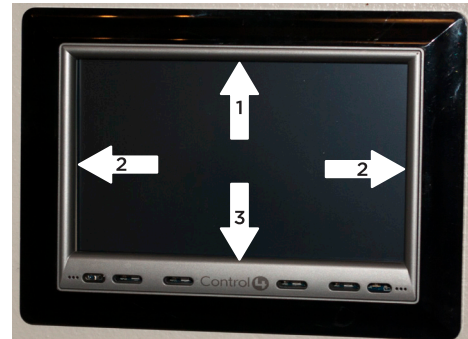


- 3 Remove the two screws that hold the touch screen to the wall box, and keep the screws for use later in the procedure.



- 4 Pull the touch screen away from the wall box, disconnect the wires that connect to the touch screen (including Ethernet, if present), then completely remove the touch screen.

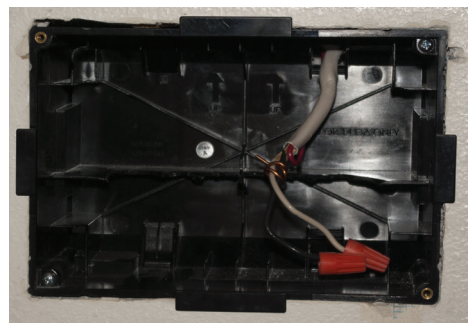


## Installing the adapter kit

 **Note:** If you are installing a 7" T3 touch screen, you must install the back *and* the front adapter plates. If you are installing a 10" T3 touch screen, the front adapter plate is optional.

### To attach the back adapter plate and power box:

- 1 If necessary, use a cutting tool to remove any plastic in the wall box that may interfere with mounting the T3 touch screen's power box.
- 2 Place the back adapter plate on top of the wall box, then attach it to the wall box using the two screws that were used to hold the old touch screen in place.

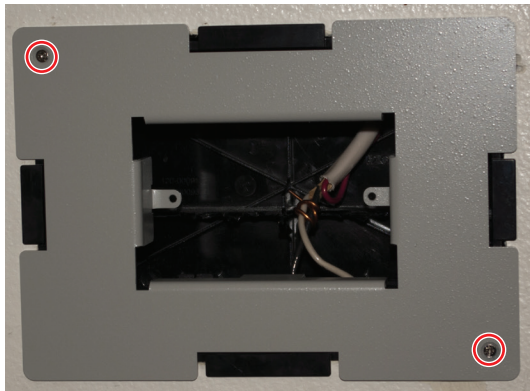

- 3 Determine whether you need to attach the front adapter plate.

If you are installing a 7" touch screen, you must install the front adapter plate to conceal the wall box tabs.


If you are installing a 10" touch screen, install the front adapter plate only if you want to conceal the wall box tabs when viewing the screen from the side.




10" touch screen  
without front  
adapter plate




10" touch screen  
with front  
adapter plate


 **Note:** If you attach the front adapter plate, the wall box's top and bottom tabs will be concealed, but at the cost of offsetting the touch screen further from the wall.

- 4 To attach the front adapter plate (optional), place it over the back adapter plate.
- 5 Follow the installation instructions in the *T3 In-Wall Touch Screen Installation Guide* ([ctrl4.co/iw-ig](http://ctrl4.co/iw-ig)) to attach the AC power or PoE connections to the T3 power box. The use of AC power or PoE depends on your installation requirements.
- 6 Insert the power box into the adapter plate, then use the screws that came with the T3 In-Wall Touch Screen to secure the power box into the adapter plate(s).

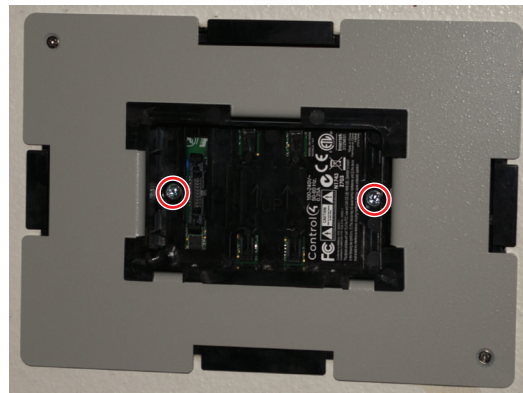

- OR -

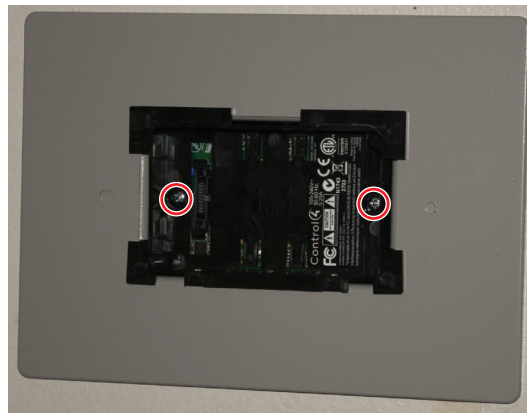

 **Caution!** Hand tighten the screws with *very little* torque. Over-tightening the screws will drive the power box too deep into the adapter plate and will either (1) break the plastic tabs on the power box or (2) misalign the power box such that the touch screen will not attach to the power box correctly.

- 7 Attach the new T3 In-Wall Touch Screen to the power box.

## Additional resources

The following resources are available for additional support:

- Control4 Knowledgebase and forums
- Control4 Technical Support
- Control4 website: [www.control4.com](http://www.control4.com)
- Composer documentation in online help or PDF format available on the Dealer Portal under *Support* ([ctrl4.co/docs](http://ctrl4.co/docs)).

## Regulatory and safety information

To review regulatory information for your particular Control4 products, see the information at [ctrl4.co/reg](http://ctrl4.co/reg).

## Warranty

Visit [www.control4.com/warranty](http://www.control4.com/warranty) for details.

## More help

For the latest version of this document, open this URL or scan the QR code on a device that can view PDFs.



[control4.com](http://control4.com) | 888.400.4070