# JA-150P Wireless PIR motion detector

The JA-150P is a component of the JABLOTRON JA100 system. human movement in building Its detection characteristics can be modified by using an alternative lens. False alarm immunity is available in two levels. The detector has a pulse reaction (only reports its triggering), uses wireless communication and is powered with two alkaline batteries. The detector should be installed by a trained technician with a valid certificate issued by an authorized distributor.

#### Installation

The detector can be installed onto a wall or in the corner of the room. There should be no objects which quickly change temperature (electric heaters, gas appliances, etc.) or which move (e.g. curtains hanging above a radiator) or pets in the detector's field of sight. It is not recommended to install the detector opposite windows or floodlights or in places with over-intense air circulation (close to ventilators, heat sources, air conditioning outlets, non-airtight doors, etc.). There should be no obstacles in front of the detector which might obstruct its view.

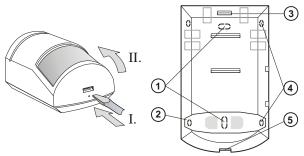


Figure: 1 - holes for installing on a flat wall; 2, 4 - holes for installing at an angle (in a corner); 3 - PCB tab; 5 - cover tab

- Open the detector cover (by pushing the tab 5). Avoid touching the PIR sensor inside (11) - you could damage it.
- 2. Take out the PCB it is held by a tab (3).
- 3. Punch through the holes for the screws in the plastic base and attach it on the wall. The recommended detector installation height is 2.5m above the floor.
- 4. Set the *Immunity* jumper as required see the detector settings.
- 5. Insert the PCB back and proceed further according to the control panel installation manual. Basic procedure:
  - a. There must be a JA-110R radio module installed in the control
  - b. Go to the F-Link program, select the required position in the Detectors window and launch the enrollment mode by clicking on the Enroll option.
  - c. Insert the batteries (mind the correct polarity). When the second battery has been inserted into the detector, an enrollment signal is transmitted to the control panel and the detector is enrolled to the selected position. This is followed by up to three minute detector stabilization phase indicated with LED indicator flashing.
- 6. Close the detector cover and test its functioning

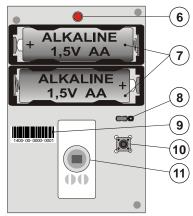


Figure: 6 – red detector activation indicator; 7 – battery; 8 – immunity setting jumper; 9 - production code; 10 - tamper contact; 11 - PIR sensor;

#### Note:

The detector can also be enrolled into the system by entering its production code (9) in the F-Link program (or using a bar code scanner).

### Detector settings

Immunity level can be set with a jumper on a PCB inside the detector and it determines false alarm immunity. The NORM level (default setting) combines basic immunity with a rapid reaction. The HIGH level provides increased immunity but the detector reaction is slower.

## Detector function modes

The detector can work in two modes:

Smartwatch is a default setting intended for the permanent monitoring of movement in the guarded area. If permanent movement is detected, three reports are sent every 20s. The next report is then sent after 2 minutes. If the detector does not detect any movement for 10 minutes, the mode with three reports every 20s is used again.

The other available detector mode is one minute interval. When the detector detects movement, it sends a report and goes into standby mode for 1 minute. When the time is over, the detector wakes-up and remains active until the next detection of movement.

To change the mode, press and hold the tamper contact in the cover, insert the battery and release the tamper contact 3-5 seconds after the battery insertion. The detector then flashes either once (smartwatch) or twice (one minute interval) to indicate the currently selected mode.

# Detector testing


When you close the detector cover, its LED indicates all movement for a period of 15 minutes and reports it to the control panel. After this time the detector switches to the mode which was selected during the battery insertion. Detector function can also be checked via the Diagnostics window in the F-link program.

# Battery replacement

The system sends a report automatically when the battery is low. Batteries should be replaced within one week. Remember to switch the system to Service mode before changing the batteries (otherwise a tamper alarm will be triggered).

### Detection characteristics

The standard lens that is supplied with the JA-110P detector covers an area of 110 degrees / 12m. The area is covered by 3 beams - see the following figure.

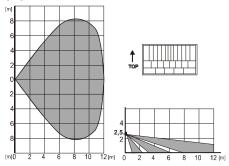

The characteristic can be changed by using an alternative lens:

	The characteristic can be changed by doing an attendance lens.		
	JS-7904	Coridor lens Designed for long corridors – with a working range of up to 20m	
		Increased analysis cannot be used with such a lens!	
	JS-7910	Pet lens Equipped only with the upper beam covering 120 degrees /12m and not covering the floor (can eliminate the movement of small pets on the floor)	
	JS-7902	Vertical curtain lens It does not cover an area but creates a detection wall (can be used to create a barrier and report its breach)	

Note: when a lens is replaced with a different type, test whether the detector covers the area correctly (a wrongly installed lens can cause detection errors).

### Technical specifications

Power 2 AA (LR6) 1.5 V 2400mAh alkaline batteries Typical lifetime about 2 years (the longest lifetime is achieved in smartwatch mode) 868.1 MHz, JABLOTRON protocol Communication band approx. 300 m (unrestricted area) Communication range 2.5 m above the floor

Recommended installation height Detection angle / detection coverage

110 degrees / 12 m (with standard lens) 60 x 95 x 55 mm, Grade II

Classification EN 50131-1, EN 50131-2-2, EN 50131-5-3 according to Operational environment according to EN 50131-1 II. Indoor general Operating temperature range 10 to +40 °C

Also complies with ETSI EN 300220, EN 50130-4, EN 55022, EN 60950-1 Can be operated according to ERC REC 70-03



Dimensions

JABLOTRON ALARMS a.s. hereby declares that the JA-150P detector is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The original of the conformity assessment can be found at <a href="https://www.jablotron.com">www.jablotron.com</a> - Technical Support section



1/1

Note: Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use. For more detailed information visit www.iable